

Programming your Optik TV™ remote

There is a tutorial video on this topic. Please visit telus.com/helpcentre and select the title **programming your remote**.

Step 1 – programming the TV button

- 1 Find the remote user guide that came with your Optik TV remote. Or reference the guide online telus.com/optikremote
- 2 On the reverse side of the guide, use the code table to locate the correct code for your TV by looking up the brand and mode (TV or HDTV). There may be more than one TV code listed.
- 3 Turn on TV.
- 4 Press and hold **TV** ; and then press **OK** – when both are released, the buttons will flash 2 times.
- 5 Enter **TV code** on the number pad - the **TV** button will flash 3 times.
- 6 Press **POWER** and your TV will now power off with your remote.

If your TV does not turn off, repeat steps 3-5 with the next code that's available for your TV. Repeat these steps until you have found the correct code and your TV powers off.



Step 2 – synchronizing the power button

- 1 Turn on your TV and TELUS TV set top box.
- 2 Press and hold **TELUS STB** ; and then press **OK** – when both are released, the buttons will flash 2 times.
- 3 Enter code **9 7 7** on the number pad – the **TELUS STB** button will flash 2 times.
- 4 Press **TELUS STB** and then the **TV** to link the 2 devices – the buttons will flash 2 times.
- 5 Press **ENTER OPTIONS**
- 6 Press **POWER**. Your TV and Optik TV digital box will now power off with your new remote.

Congratulations – you're done!

Troubleshooting: If the programming does not work properly, please refer to the FAQ's at telus.com/remotefaq

